


Click <1/3 second

Press-hold-release (PHR) >1/3 second

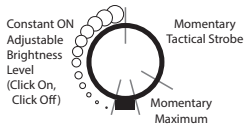

From off (CCW half - click on/off):

- Click Preset C
- PHR Preset C (momentary if M enabled)
- Click, PHR Preset A (momentary if M enabled)
- Triple-click Temporary level lock
- Quad-click Toggle Locator Flash On/Off (if LF enabled)

From on (click on/off modes):

- Click Off
- PHR Momentary preset A
- Click, PHR Preset A
- Double-click Toggle between selected preset and preset A
- Double-click, PHR Brightness menu (if Cust enabled)
- Triple-click, PHR Option menu (if Cust enabled)

Within Brightness or Option Menu:

- Click Move to next item
 - Double-click Reverse direction to previous item
 - Press and hold Set item - hold until light turns off
 - dim to bright ramp: enabling item
 - bright to dim ramp: disabling item
- <5 flashes> Error - nothing changed - exits menu

Option Menu:

- <quick flashes, long flash> Swap Positions A and B
 - <bright-to-dim-ramp> Automatic Turn Off
 - <dim flash> Locator Flash (LF)
 - <long flash, short flash> Pseudo Momentary (M)
 - <brighter-dimmer> Burst
 - <dim-to-bright-ramp> Disable customization (Cust)
- Reset, 20-click, PHR Enable customization (Cust)