

Click <1/3 second **Press-hold-release (PHR)** >1/3 second

From off:

- Click Preset B (when TOP set to preset B)
- PHR Preset B (momentary if M enabled)
- Click, PHR Preset A (momentary if M enabled)
- Triple-click Lock/unlock button (if BL enabled)

From on:

- Click Off
- Double-click Toggle between preset B and C; return to preset B or C from other presets
- Triple-click Preset D
- Click, PHR Preset A
- PHR Momentary preset A
- Double-click, PHR Brightness menu (if Cust enabled)
- Triple-click, PHR Option menu (if Cust enabled)

(Front of Card)

Within Brightness or Option Menu:

- Click
- Double-click
- Press and hold

<5 flashes>

Option Menu:

- <long flash> Turn On Preset (TOP)
- <three rapid flashes> Button Lock (BL)
- <bright-to-dim-ramp> Automatic Turn Off
- <dim flash> Locator Flash
- <long flash, short flash> Momentary (M)
- <brighter-dimmer> Burst
- <dim-to-bright-ramp> Disable customization (Cust)
- Reset, 20-click, PHR Enable customization (Cust)

(Back of Card)

White plastic card 3.375 x 2.125, 0.020 thick, rounded corners, black ink, matte finish
7.5-point Helvetica
Revised December 20, 2011