

Click <1/3 second

Press-hold-release (PHR) >1/3 second

From off:

- Click
- PHR
- Click, PHR
- Quad-click

Preset B (when TOP set to preset B)
Preset B (momentary if M enabled)
Preset A (momentary if M enabled)
Toggle Locator Flash On/Off

From on:

- Click
- PHR
- Click, PHR
- Double-click

- Triple-click
- Double-click, PHR
- Triple-click, PHR

Off
Momentary preset A
Preset A
Toggle between preset B and C; return
to preset B or C from other presets
Preset D
Brightness menu (if Cust enabled)
Option menu (if Cust enabled)

Within Brightness or Option Menu:

- Click
- Double-click
- Press and hold

<5 flashes>

Option Menu:

<long flash>
<bright-to-dim-ramp>
<dim flash>
<long flash, short flash>
<brighter-dimmer>
<dim-to-bright-ramp>

Reset, 20-click, PHR

Move to next item
Reverse direction to previous item
Set item - hold until light turns off
- dim to bright ramp: enabling item
- bright to dim ramp: disabling item
Error - nothing changed - exits menu

Turn On Preset (TOP)
Automatic Turn Off
Locator Flash
Pseudo Momentary (M)
Burst
Disable customization (Cust)

Enable customization (Cust)