


Click <1/3 second

Press-hold-release (PHR) >1/3 second

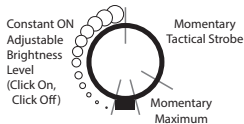

From off (CCW half - click on/off):

- Click Preset C
- PHR Preset C (momentary if M enabled)
- Click, PHR Preset A (momentary if M enabled)
- Quad-click Toggle Locator Flash On/Off

From on (click on/off modes):

- Click Off
- PHR Momentary preset A
- Click, PHR Preset A
- Double-click Toggle between selected preset and preset A
- Double-click, PHR Brightness menu (if Cust enabled)
- Triple-click, PHR Option menu (if Cust enabled)

Within Brightness or Option Menu:

- Click
- Double-click
- Press and hold

- Move to next item
- Reverse direction to previous item
- Set item - hold until light turns off
- dim to bright ramp: enabling item
- bright to dim ramp: disabling item
- Error - nothing changed - exits menu

<5 flashes>

Option Menu:

- <bright-to-dim-ramp> Automatic Turn Off
- <dim flash> Locator Flash
- <long flash, short flash> Pseudo Momentary (M)
- <brighter-dimmer> Burst
- <dim-to-bright-ramp> Disable customization (Cust)
- Reset, 20-click, PHR Enable customization (Cust)