

Quick Start

Copyright 2003-2004 by HDS Systems, Inc.

All rights reserved

March 22, 2005

The following instructions will give you a quick start to using your EDC Basic™ flashlight. Please refer to the User's guide for detailed information.

Click: a quick push of the button - less than half a second. **Press:** a long push of the button - longer than half a second. **N-click:** a sequence of 2 or 3 clicks. **N-click-press:** a sequence of 2 clicks followed immediately by a press.

From Off

- Click to turn on - stays on after button released
- Press to turn on - stays on after button released

From On

- Click to turn off
- Press for momentary Maximum setting - returns to previous setting when button is released
- Double-click to toggle Primary/Secondary setting or change back to last Primary/Secondary setting from Minimum or Maximum setting
- Double-click-press to change to Maximum setting
- Triple-click to change to Minimum setting

Soft Reset - remove the batteries for 1 minute. Reinstall batteries. Identified by 1 second of dim light. Does not change your settings.