

**To Operate:**      **Click** <1/3 second      **Press** >1/3 second

- Click      **Turn on**
- 2 clicks      Toggle between or return to Primary/  
Secondary from other settings
- 3 clicks      Minimum setting
- Click-press      Maximum setting
- Press      Momentary Maximum setting
- 2-clicks-press      Ramp brightness – turn off to save setting
- 3-clicks-press      Enter Option menu
- Click      **Turn off**

**Other commands from off:**

- Press      Turn on\*
- Click-press      Maximum setting\*
- 3 clicks      Lock/Unlock if Automatic Button Lock is on  
\* Momentary if Simple Momentary is on

(Front of Card)

**Within Option Menu:**

- Click      Move to next item
- 2 clicks      Reverse direction to previous item
- Press and hold      Set item - hold until light turns off
- <6 flashes>      Error - nothing changed - exits menu

**Options Menu:**

- <flash>      Emergency Strobe
- <SOS>      Emergency SOS Signal
- <dim flash>      Locator Flash
- <long flash>      Force Setting
- <three rapid flashes>      Automatic Button Lock
- <bright-to-dim>      Automatic Turn Off
- <short-long flash>      Simple Momentary
- <short-short-long flash>      Tactical Momentary
- <dim-to-bright>      Ramping and Option menu

(Back of Card)

White plastic card 3.375 x 2.125, rounded corners, black ink  
8-point Helvetica  
revised August 8, 2013