

# EDC Rotary™ Flashlight User's Guide

Copyright 2019 by HDS Systems, Inc.  
All rights reserved.

## Basic Operation


**Clicking** the button (a quick press and release of the button) will turn on your flashlight. Clicking the button a second time will turn off your flashlight.

While your flashlight is on, you can **press-and-hold** the button to momentarily activate Maximum – releasing the button returns to the previous brightness level. You can also **click-press-hold-release** to activate Maximum and stay on Maximum. There is no delay between the click and the press.

You can select the Maximum setting directly from off by performing a **click-press-hold-release**. There is no delay between the click and the press.

Your light turns on to the brightness level selected by the rotary control.

Rotary  
Adjustable  
Brightness  
Level

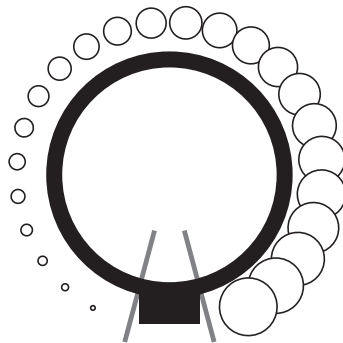

Use the rotary control to select any brightness level between 0.02 lumens and Maximum.

The Brightness menu may be used to enable two additional presets accessible through double-click and triple-click.

## Low Battery Indication

Your flashlight will turn off momentarily and then back on one level below the previous brightness level when the battery is unable to supply enough power to run the current brightness level. This process is repeated as needed as the battery's power is depleted.

Your flashlight will double-blink once every two minutes to remind you that the battery needs to be changed when the battery is no longer capable of maintaining a 50 lumen output level and you are asking for an output level higher than the battery can maintain.

Your flashlight restricts the output to the highest brightness level the battery can maintain. However, if you turn off your flashlight and turn it back on again to a higher level, your flashlight will slowly step up through the brightness levels testing the battery again.

## Button Lockout

You can disable the switch by unscrewing the battery compartment from the head one half turn. The O-ring will remain completely covered. You restore operation of the switch by screwing the battery compartment completely into the head.

You can also enable the Button Lockout option. When enabled, triple-click from off locks and unlocks the button.

## Cleaning and Maintenance

Periodically clean the open end of the battery compartment, threads and O-ring with a clean lint-free cloth lightly moistened with isopropyl alcohol. Apply a coat of non-conductive silicon or petroleum grease to these surfaces.

Replace the battery compartment O-ring if it becomes worn or damaged. O-ring: 1.5mm x 20.5mm, 70 durometer Nitrile (Buna-N).

The recessed electrical contacts and interior threads in the head can be cleaned using a lint-free swab lightly moistened with isopropyl alcohol. Recessed contacts and threads should be cleaned in a counter-clockwise direction to prevent snagging the swab in the threads. Be sure to remove any particles or fibers that may be left behind. Apply a coat of non-conductive silicon or petroleum grease to the interior threads and contacts.

The exterior can be cleaned with a mild soap and water. Rinse well and dry with a soft cotton cloth.

**Note:** the anti-reflective coating on the lens can be abraded by excessive rubbing or cleaning. Never use paper tissues or paper towels to clean or dry the lens as the fibers are abrasive.

## Additional Information

Your flashlight has many capabilities not presented here. Please see the EDC Rotary Advanced User's Guide on our web site for a complete coverage of all features.

Voltage: 2.0 to 4.5V.

## Warranty

Please view the full warranty on our web site.

Specifications subject to change without notice.

HDS Systems, Inc.

Phone: 520-325-3004

P.O. Box 42767

E-mail: [info@HDSsystems.com](mailto:info@HDSsystems.com)

Tucson, Arizona 85733 USA

Web: [www.HDSsystems.com](http://www.HDSsystems.com)

Updated November 11, 2019. Software version 2.18.